


## **Using the Projector with the Jubilee Hall DVD/ Blu-ray Player**

The Player will be found in its own box within the Sound System cupboard, on the top shelf. It is clearly labelled. Remove the player from its box, place on a small table and connect it to the wall mounted HDMI socket using the HDMI cable provided in the box, and connect to a wall mounted power socket.

**From this point it is recommended that the REM is used for all control purposes.**

For operating the projector, refer to the instruction notes for the projector using the HDMI connection.

### **DVD/Blu-ray Player**

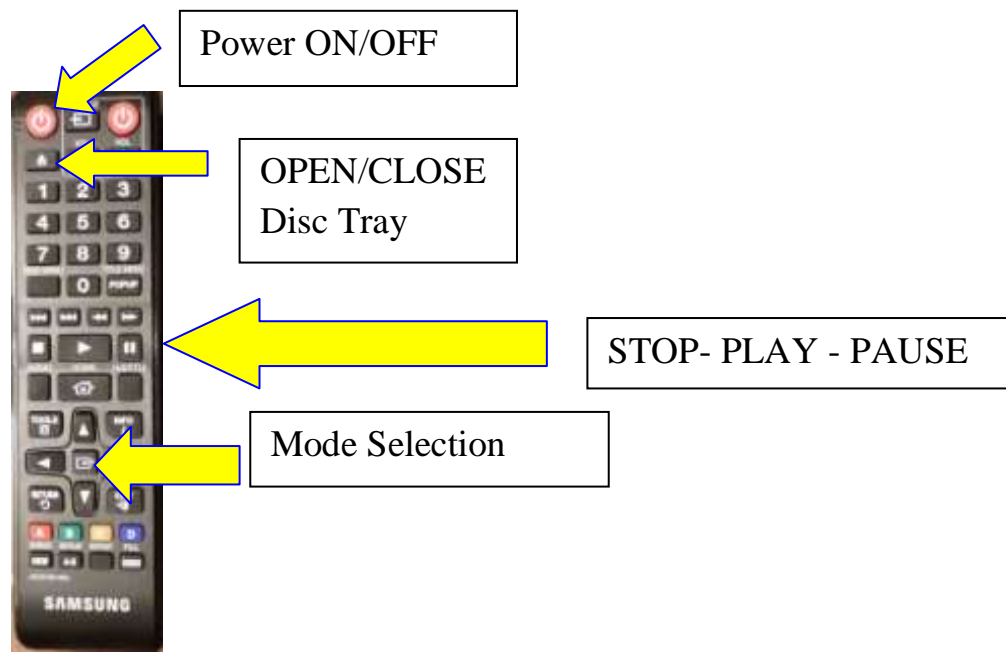

This equipment is extremely easy to use and in common use. After connecting to the HDMI socket and Power, switch on by pressing the red button. Open the tray by pressing the ‘arrowhead’ key below the Power button. Place the disk in the tray and close tray by re-pressing the ‘arrowhead’ key.

When the Mode screen appears, highlight the mode to be selected by using the adjacent arrow buttons, and click the selection button (central key).

The disk menu will then appear. Press the Play button.

On completion, remove the disc and switch off and disconnect following the set-up instructions on reverse.

Switch off projector using the instructions for the projector.

This equipment can also be used for displaying contents of CDs and Memory sticks. Follow the instructions in the Samsung manual carefully, ensuring that you are using the appropriate file formats, otherwise images will not be displayed.